

Installation Instruction

Model : 0103-0138


STEP 1. Insert **nut clips** in truck body.

STEP 2. Install **front mount bracket** and **rear mount bracket** by using 5/16" fasteners. Leave bolts loose.

STEP 3. Fasten **step bar** to **mount brackets**. Check to be sure step bar is properly aligned with the truck. Tighten and torque all bolts.

Note : This application is body mount instead of frame mount, which means if you are under your pickup and face toward the door (not frame), remove black rubber plugs on the inside face of sheet metal rocker panel, install mounting bracket by placing bolts through hole (black rubber plug position).


Item No.	Part Number	Part Description	QTY
1	0103-0138-01	STEP BAR - DRIVER, SIDE	1
2	0103-0138-02	STEP BAR - PASSENGER SIDE	1
3	0103-0138-03	MOUNT BRACKETS - FRONT	2
4	0103-0138-04	MOUNT BRACKETS - REAR	2
5	0103-0138-11	5/16"-18 X 1.25" HEX HEAD BOLT	12
6	0103-0138-12	5/16" FLAT WASHER	20
7	0103-0138-13	5/16" LOCK WASHER	12
8	0103-0138-14	5/16"-18 HEX NUT	8
9	0103-0138-15	5/16"-18 NUT CLIP	12
10	0103-0138-16	M14 X 2.5" HEX HEAD BOLT	4
11	0103-0138-17	M14 X 1" LOCK WASHER	4
12	0103-0138-18	M14 X 1 3/8" FLAT WASHER	4

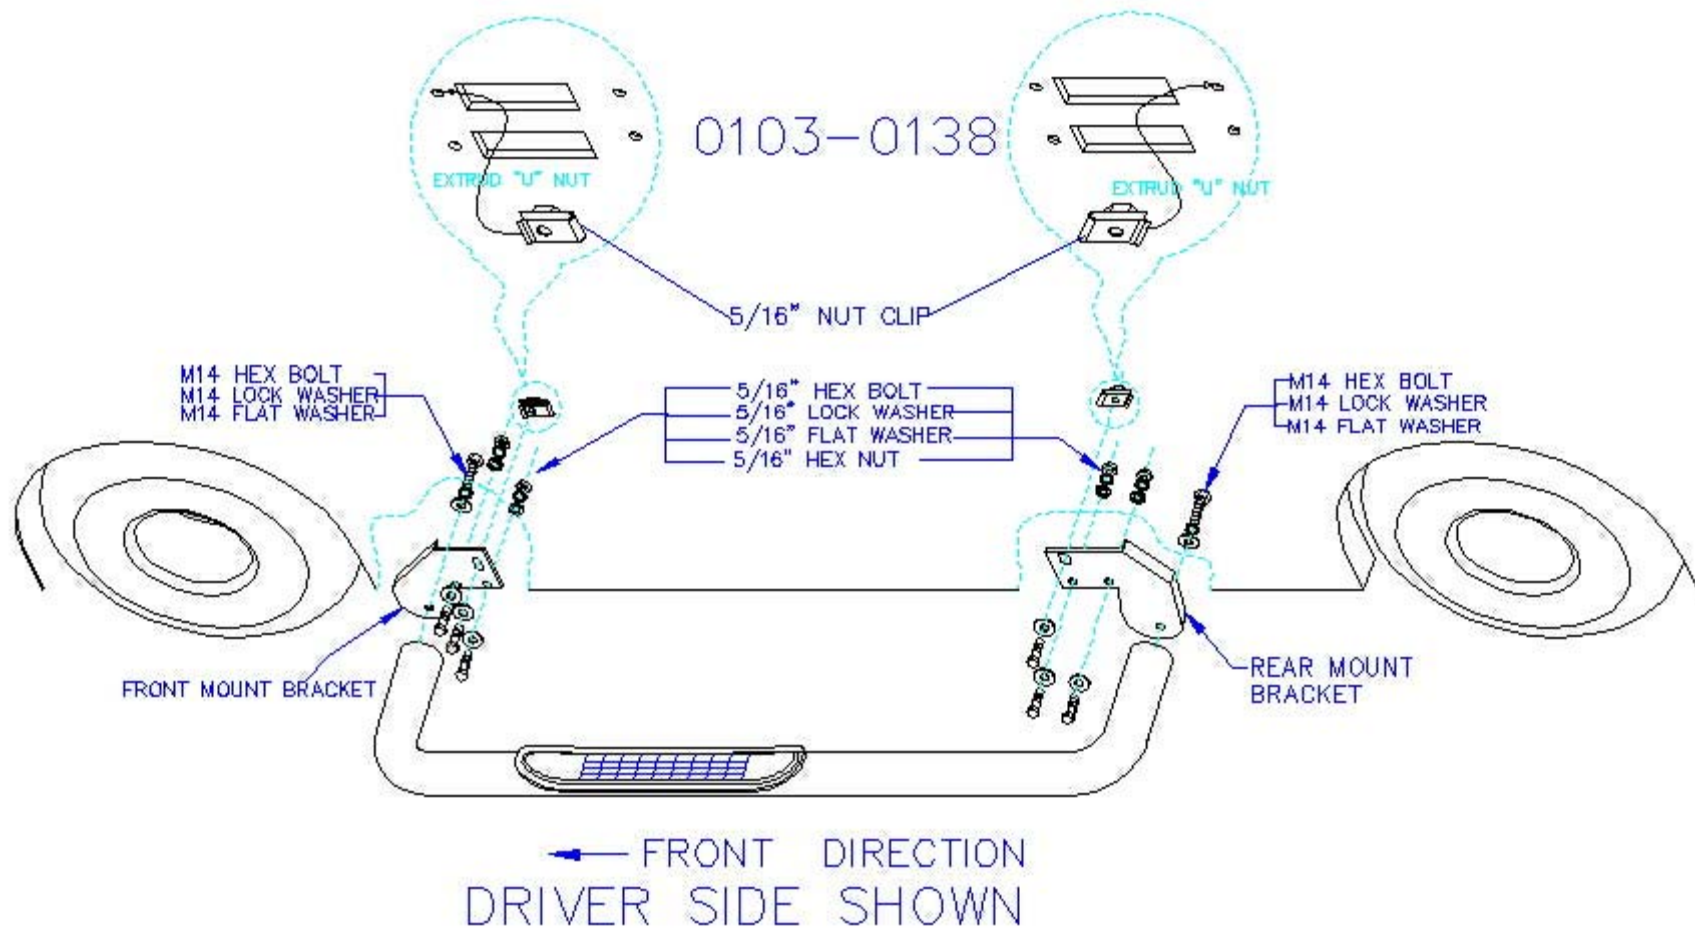


- 5/16" HEX BOLT
- 5/16" LOCK WASHER
- 5/16" FLAT WASHER
- 5/16" HEX NUT

- M14 HEX BOLT
- M14 LOCK WASHER
- M14 FLAT WASHER

— REAR MOUNT BRACKET

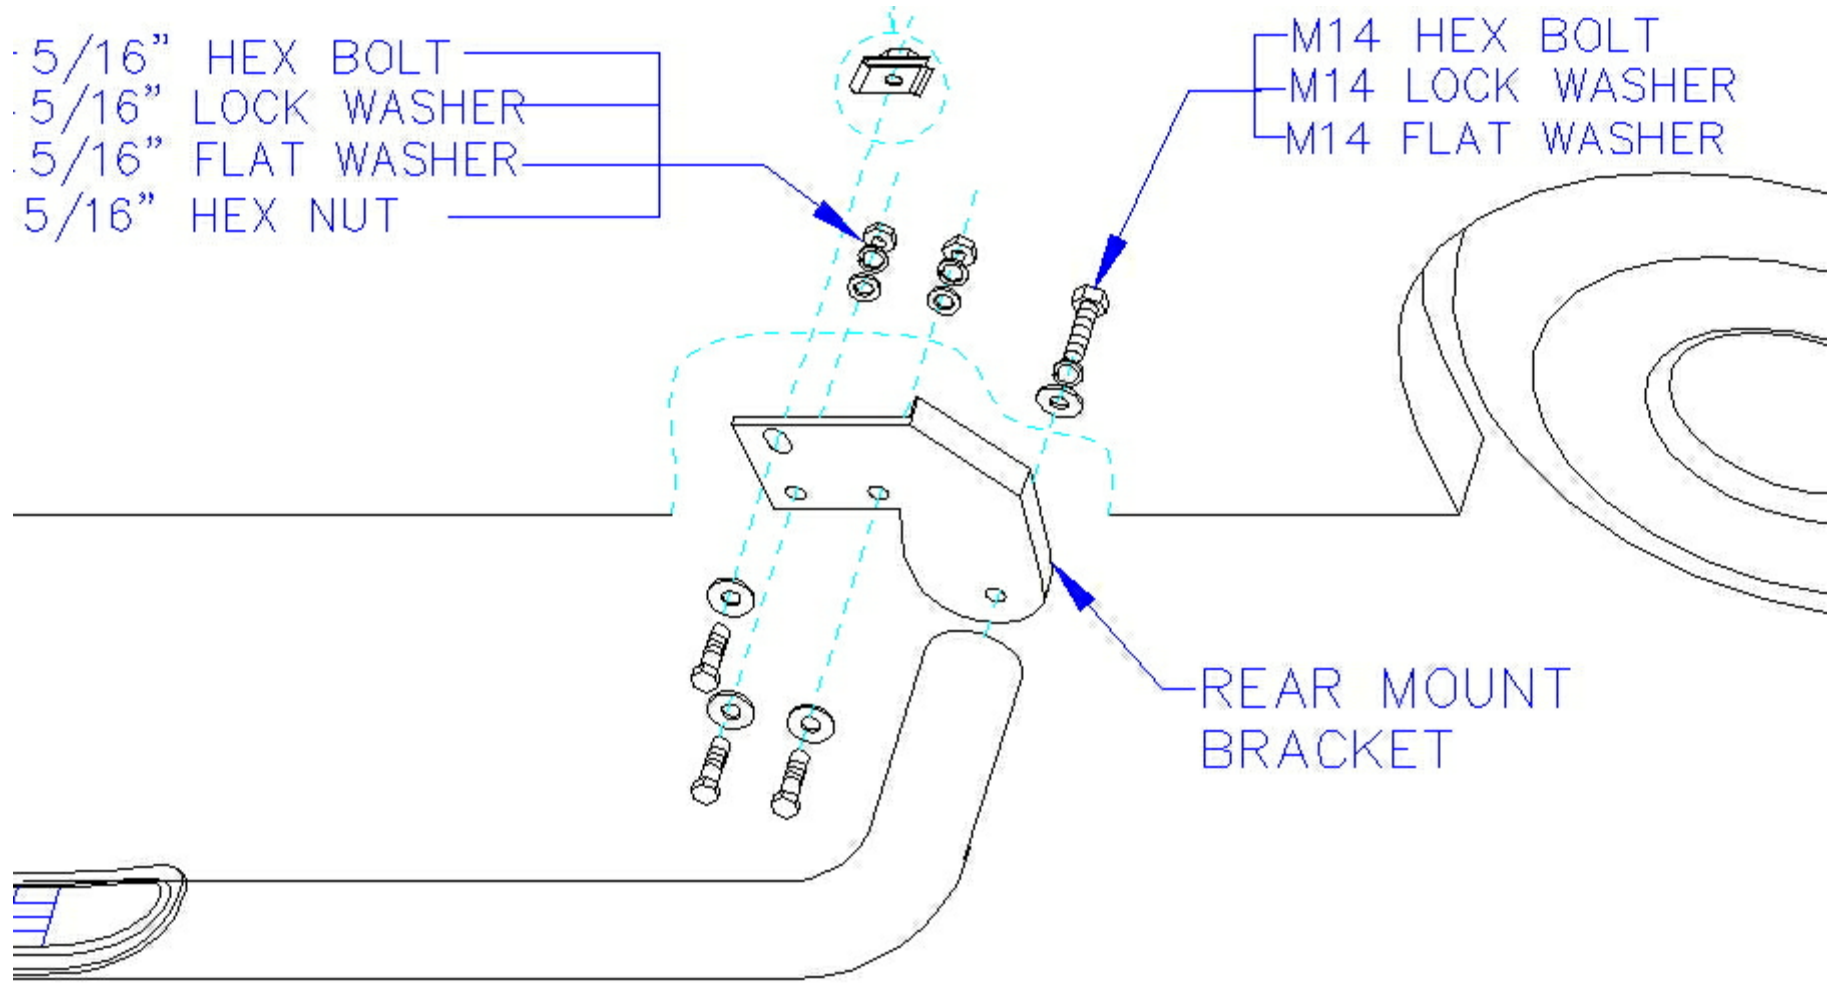

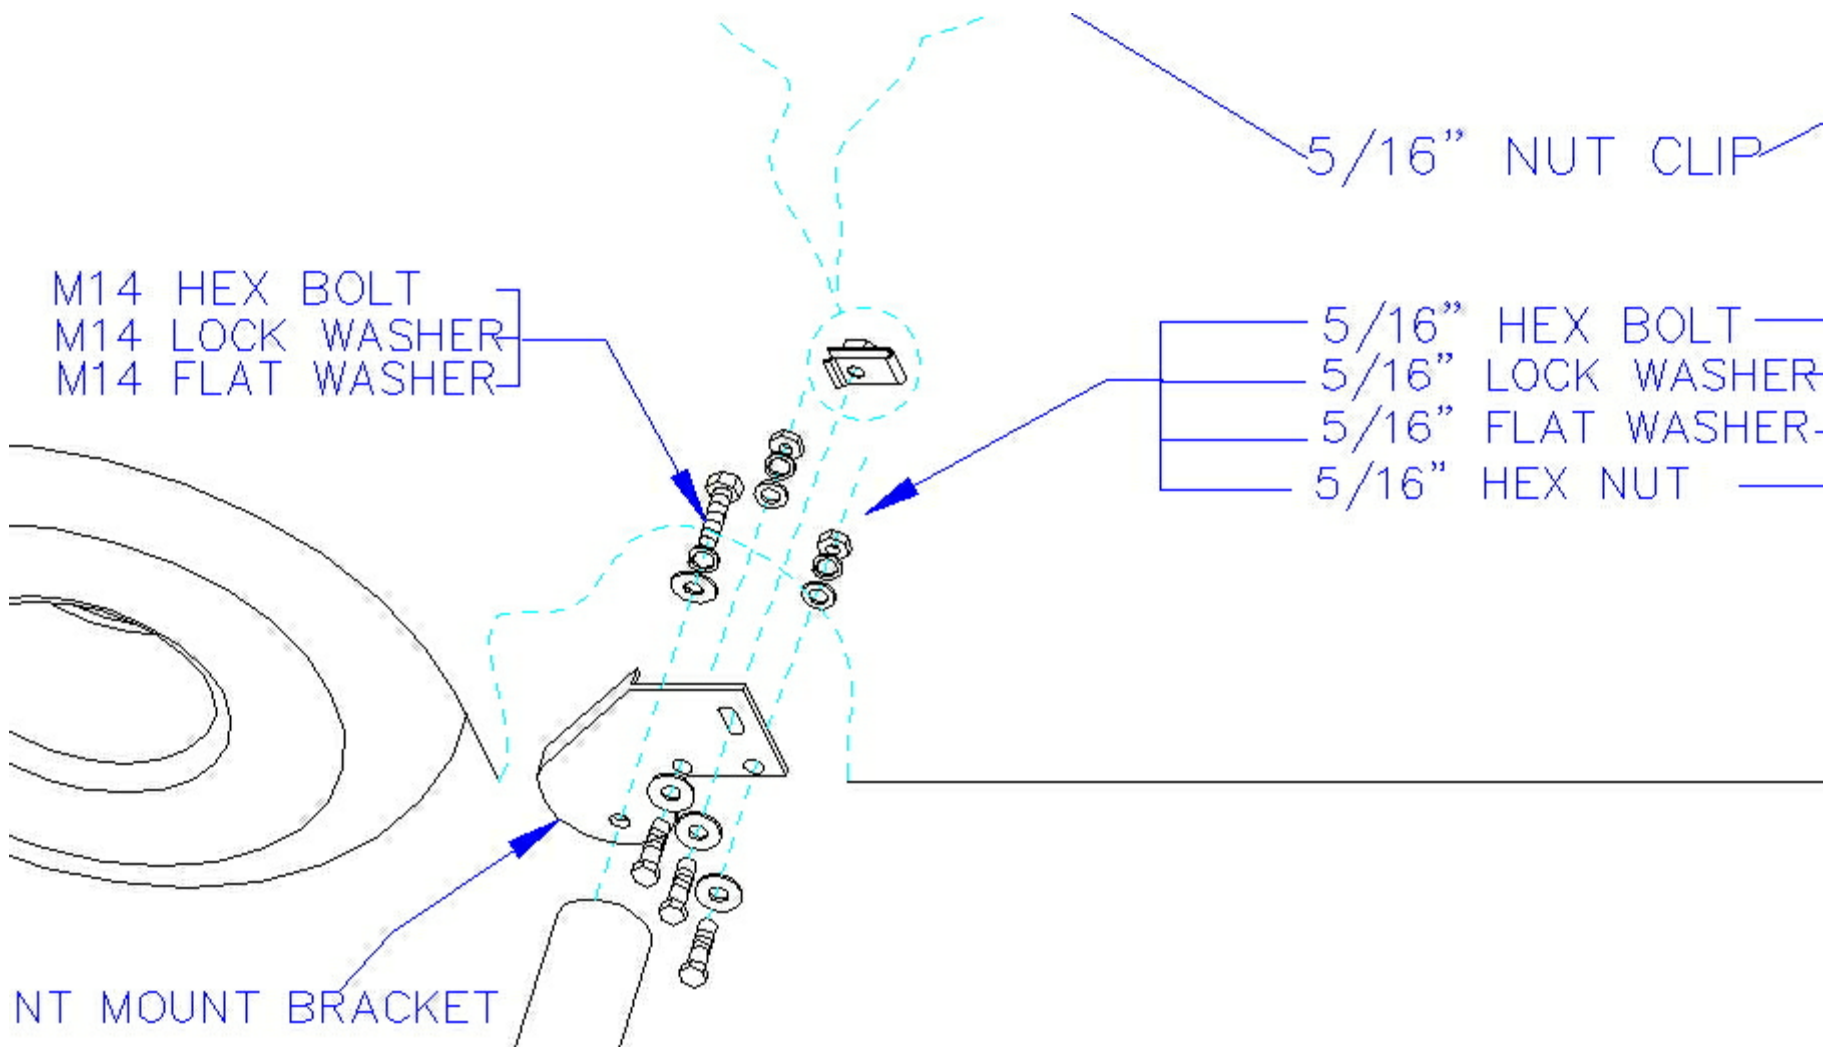

0103-0138

EXTRUD "U" NUT

EXTRUD "U" NUT

5/16" NUT CLIP

BOLT
← WASHER
↑ WASHER

- 5/16" HEX BOLT
- 5/16" LOCK WASHER
- 5/16" FLAT WASHER
- 5/16" HEX NUT

M14 H
M14 LC
M14 FL

BRACKET

REAR MC
BRACKET

